


Installation Instructions

Notice d'installation

Instrucciones de montaje

Ex9RE40 Electronic overload relay

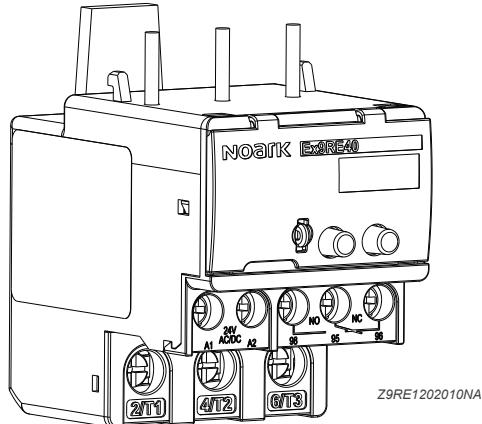


WARNING

DO NOT ATTEMPT TO INSTALL OR PERFORM MAINTENANCE ON EQUIPMENT WHILE IT IS ENERGIZED. DEATH, SEVERE PERSONAL INJURY, OR SUBSTANTIAL PROPERTY DAMAGE CAN RESULT FROM CONTACT WITH ENERGIZED EQUIPMENT. ALWAYS VERIFY THAT NO VOLTAGE IS PRESENT BEFORE PROCEEDING WITH THE TASK, AND ALWAYS FOLLOW GENERALLY ACCEPTED SAFETY PROCEDURES.

NOARK IS NOT LIABLE FOR THE MISAPPLICATION OR MISSAPPLICATION OF IT'S PRODUCTS.

	M4 2.0 N·m [18Lb.in]		mm ² [AWG]					
1~10[18~8]								
	M3 0.8 N·m [7Lb.in]		mm ² [AWG]					
1~2.5[18~12]								

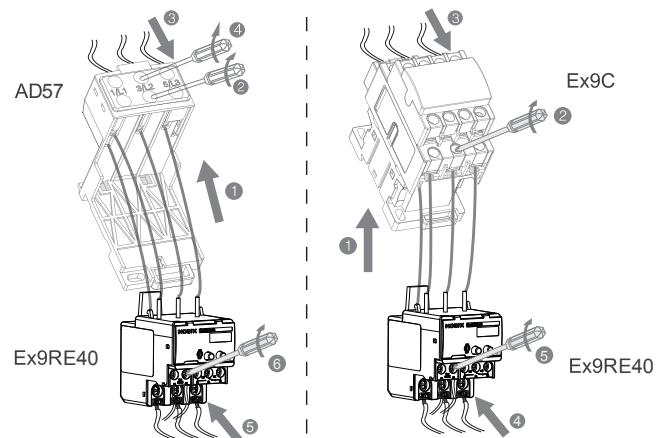

Assembly with mounting base AD57 or contactor Ex9C09-38

Warning!





Motor may start automatically. Automatic start may injure persons and damage machines. Automatic restart is possible when "automatic reset" is active.

Avertissement!

Le redémarrage automatique du moteur peut provoquer des dégâts matériels et être dangereux pour personnes. Ce danger du redémarrage automatique correspond au mode «réarmement automatique» .

¡Advertencia!

El motor puede arrancar automáticamente. El arranque automático es posible cuando el "botón de reset" está en posición automática y el circuito de maniobra activado.

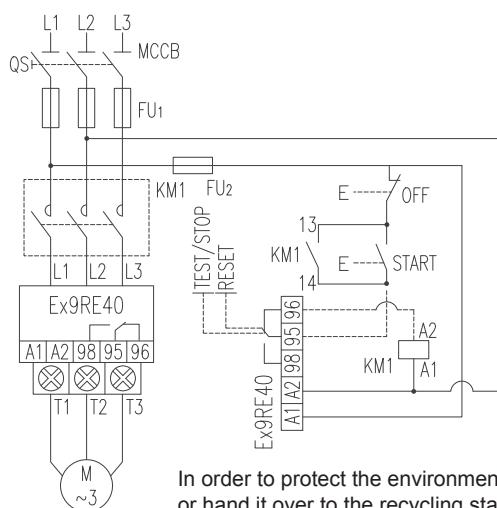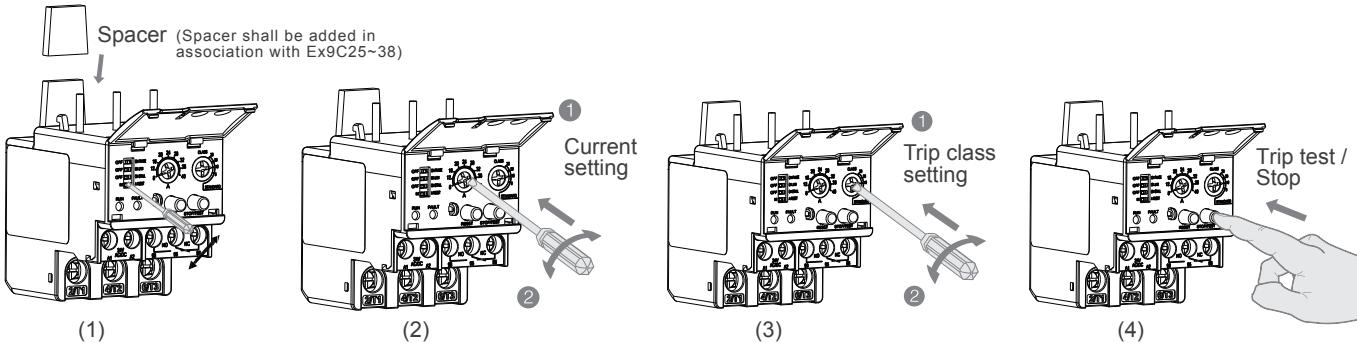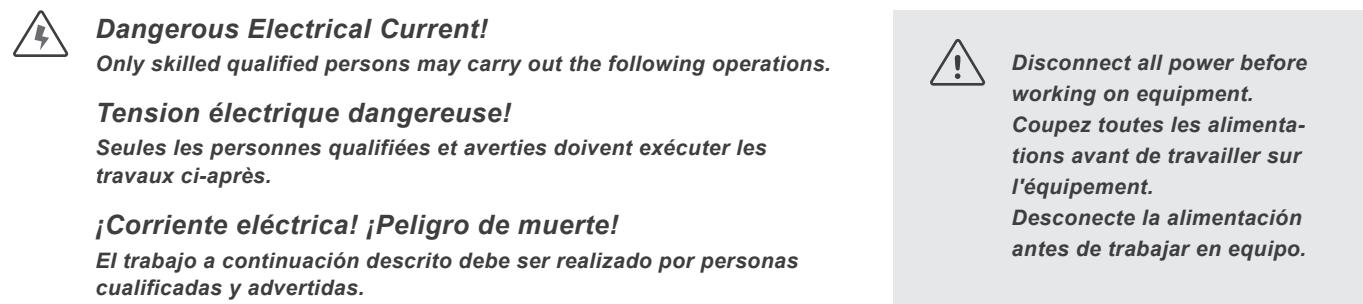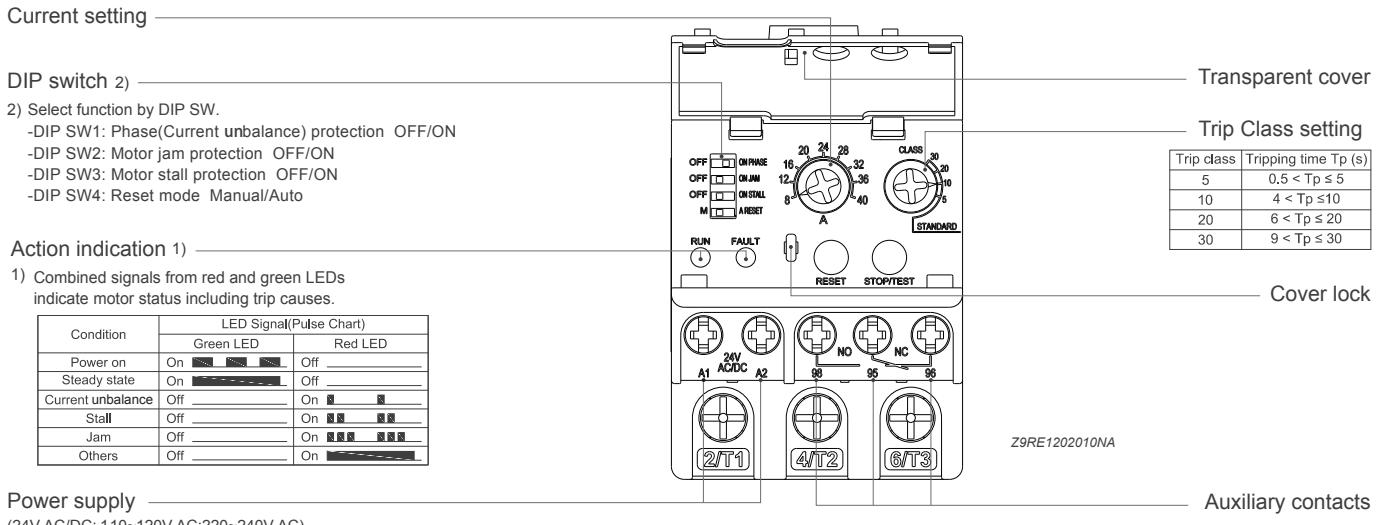

Control terminal	L	Torque (N·m) (mm²) AWG	in-lb (mm) inch
1...2.5	8	0.8	
18...14	5/16	7	
1.5...10	10	2.0	
18...8	3/8	18	
1.5...10			
18...8			
1...6			
18...10			

In order to protect the environment, when the product or its components are scrapped, please dispose of it as industrial waste; or hand it over to the recycling station for disaggregation, recycling and reuse according to relevant national regulations.

noark



Printed with environment-friendly paper
Copyright Noark. All Rights Reserved
www.noark-electric.com

10/2020